

S. Technical specifications and parameters

Product Name	AUTOMOBILE NEADREST DVD PLAYER
Disk type (signal source)	MP3/ DVD/SVCD/VCD/DVCD/CD/CDG/WMA/JPEG CD-R/CD-RW (these two types of disk should be played by the above coding formats)
Display	7" TFT LED digital Touch panel (16:9)
Output Port	Audio: stereo Video: complex video signal output (AV) USB port (for spare) MS/MMC/SD CARD PORT (for spare)
Video System	PAL/NTSC/AUTO
Video Characteristics	Video Characteristics: 1.0Vp-p (75ohm)
Audio Characteristics	Frequency characteristics: 20-20KHZ (1dB) SNR: >90dB Total harmonic distortion: <0.01%
Power Voltage	DC: 12V/1.5A
Power Consumption	About: 12W
Working Temperature	-40 °C ~ +60 °C
Working Humidity	15~75% (No water drop is coagulated)
Net Weight	Approx. 2.2KGS
Dimensions	(L)26.5*(W)25*(H)14.5CM

Manual

USER'S MANUAL



Accessories

Please check the following accessories after opening the package.

<p>Remote controller</p>  <p>2 in 1</p>	<p>Native game disk</p> 
<p>USER'S MANUAL</p> 	<p>6 Sizes plastic poles adaptor</p> <p>12,12.5,12.7,13.8,14,16mm Installation adaptor poles</p> 
<p>Power connection line</p> 	<p>AV Cable</p> 

System connection and installation


Check whether the shape and installation size is suitable, please select and employ suitable accessories and tool in disassembling and assembling




The headrest pillow type DVD install method

Takes down the original installation head rest to select and match the steel pipe according to the original installation pole diameter for the head rest that having the DVD monitor, then the adjustment head rest steel pipe spacing, passed the power source and the audio frequency lines through the chair steel pipe, and connected on the power source, the sound and video frequency system with the vehicle. simultaneously the head rest will be fixed, and will freely to adjust the height, around size based on the front seat personnel request.

Disc load position

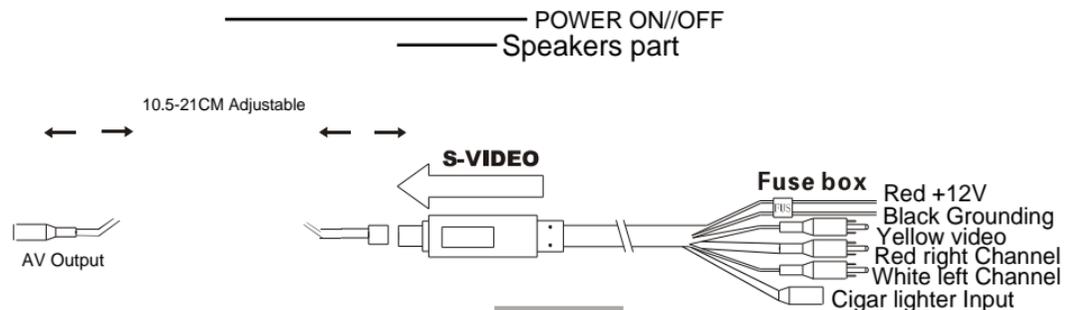

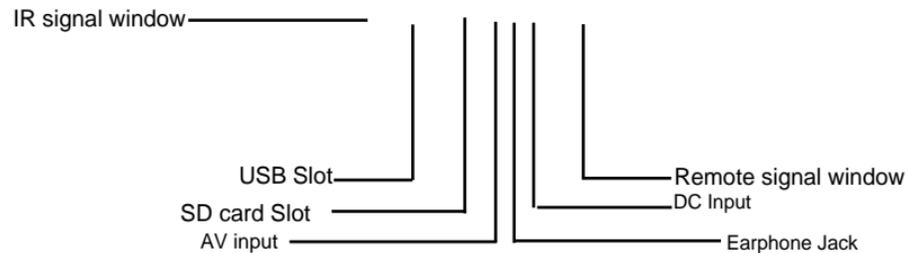

Remove disk

- (1) Press **▲** key to take out the disk
- (2) Put the disk back to the package bag or box for storage.

Caution:


- Be careful to take the disk, wrong operation shall damage the player;
- Do not damage the disk, or the player shall be damaged;
- Please keep the side with label upward if it's a single-side disk;
- Be careful in playing two-side DVD disk for the two sides of the disk are available for playing;
- Do not scratch the surface in taking the disk.

MENU

This model with touch panel, please control everything by touch screen, and use the direction button on the desk for the choice and confirmation.

You can choose the unit for Disc/USB/SD/TV or AV in playing, also can control IR/FM/Speaker and brightness, contrast directly by touch the marks on the desk, touch the OPEN to make the desk, touch the OPEN to make the disc out.

Figure 1

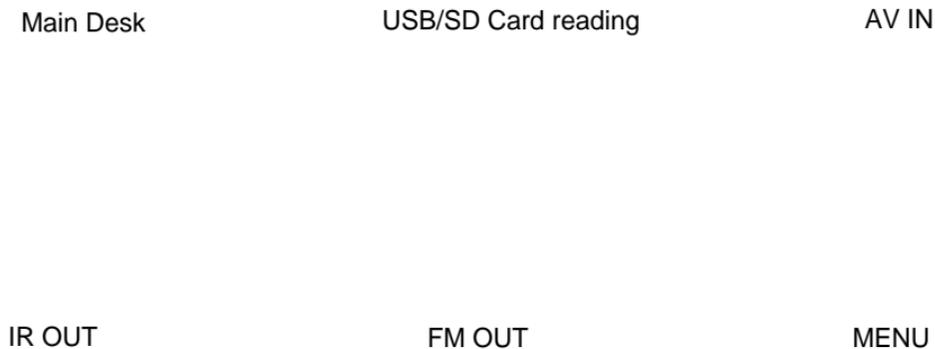



1. Disc playing

Touch Disc mark on the desk, then the unit will enter into Disc reading mode, during the disc reading can control IR/FM/speakers volume and brightness, contrast like the Figure 2, touch different function marks under the disc playing mode, can choose different numbers to choose your desired movies or songs.

MENU SETUP

Touch MENU mark picture and the TV screen will display the Picture setup image, then select Brightness, contrast, and color to increase or reduce the BRIGHTNESS, CONTRAST, and color to your desired degrees.

Figure 2 MENU IR in disc playing mode FM in disc playing mode

VOLUME

NUMBER CHOICE

MENU PLAYING



REPEAT SETUP

FORWARD KEYS

PAUSE

PREVIOUS/NEXT KEYS

DISC OUT KEY

BACK TO DESK

FM/IR

When you want to use IR or FM function, please just find the IR or FM function mark picture, then touch it to open or close IR or FM.

Note: There are two IR channels, A&B, when using IR headphones, please make sure your IR headphone's channel is exactly the same as your Player's IR channel. For example: when your IR headphone's Channel is A, then your Player's IR channel also should be at A position.
when you want to transfer the Player's Voice to your CAR Amplifiers, make sure your car FM's transmitter MHZ is exactly the same with the Players.



Operation for Game Function

The player features superior intelligent game function, it will make you enjoy the wonderful game in spare time.

2 in 1 Remote Control

Operation for game function

2.Description for playing the Game Disk Operation

- (1) Press Eject key and load the game disk(the Disk for free),the game main menu shall be displayed in seconds
- (2) Press direction key of the function control or game controller to select the games then press ENTER on the function control or press START on the game controller to enter the game.

3.Description for the Wireless Game Control

- (1) Press SELECT to enter the menu of the built-in games.
- (2) Press direction key to select the games you like, then press the START to enter the game.
- (3) Enter the game, press the direction key to select upward/downward/leftward/rightward , A and B key to operate the functions.
- (4) Press Stop/Return key on the function control or press RESET key on the game controller to exit the game.
If enter EMBEDDED Game ,press Stop/Return key or press RESET key can return to the main menu.then use direction key select EXIT and press ENTER on the function control or START on game controller to exit the game.

Caution:

For different games,the function keys might be different,the user could get the know-how by trying several times



Troubleshooting

Troubles	Solutions
No response	<ol style="list-style-type: none"> 1. Check the power connection; 2. Check the auto power is opened; 3. Check the power is opened.
No sound	<ol style="list-style-type: none"> 1.Check whether the volume is on the Min. position or in Mute state; 2.Whether at the status of FM transmitting or IR transmitting? Please select FM OFF and turn off IR Audio output function. 3.No sound output in the following states: Pause/Fast Forward/Fast Backward/ Stop. 4 Resume the default via setup system.
Image	<ol style="list-style-type: none"> 1.Check whether the player is in line input state, press DVD/AV to switch it to be DVD state; 2.Check whether the brightness setup is appropriate.
The disk couldn't be read	<ol style="list-style-type: none"> 1. Check whether the disk has been loaded and the side with label is placed upward; 2. The disk is damaged or dirtied, please load another disk or clean the disk; 3. The region codes of disk and player are different; 4. The disk format is wrong.
Improper image size	<ol style="list-style-type: none"> 1. Set up the TV system once again; 2. Select the corresponding screen format from the setup menu.
The track couldn't be selected	<ol style="list-style-type: none"> 1. Some sections of some disks are not allowed to interrupt its set playing order.
The remote continueroller refuses to work	<ol style="list-style-type: none"> 1. Check whether there exists any barrier between the remote controller and player; 2. The remote controller doesn't aim at the receiving head of player; 3. Check whether the battery is installed correctly; 4. Check whether the battery has enough electricity.