

USER MANUAL



Please read this manual before using and save this manual for future reference.

Accessories




Power cable



Antenna



Ignition cable

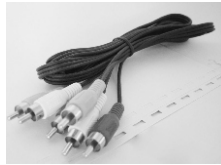

Audio/Video output cable




USB connection cable





Remote control




Content

DVB Notice and Specification-----	1
DVB-T Panel Description-----	2
Remote Control-----	3
Usage of Remote Control-----	4-5
Menu Setting-----	6-21
Accessories-----	22

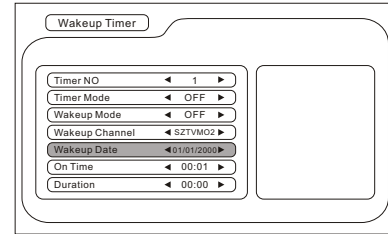

In the Configuration menu, enter Parental Lock and press UP/ DOWN to move the pointer. Then input the password and press ENTER to confirm.

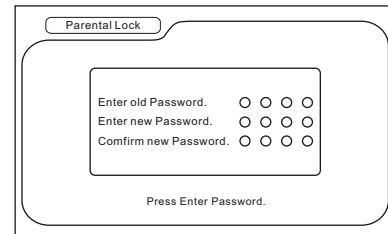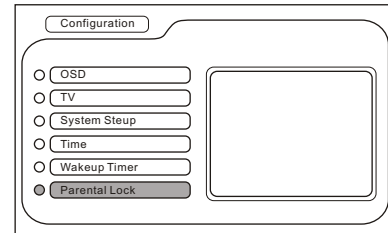

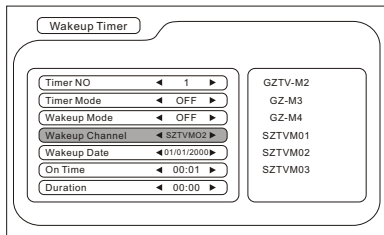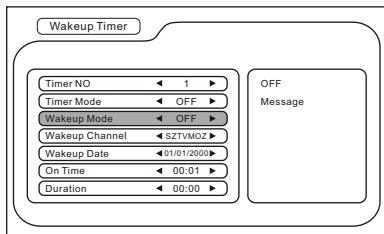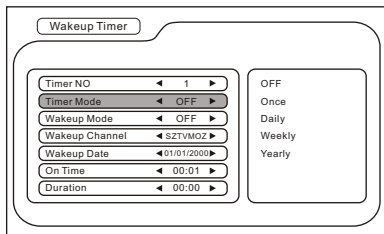

Notice

Thank you for purchasing this DVB-T unit. This is special for you with its tiny design and strong receiving ability of digital TV signal. With the enjoyment of the High-definition TV, please take care of the following issue at the same time:



Do not place this unit under the direct sunlight. It should be kept in a shady and cool place.



Do not place this unit in the wet condition. It should be kept in a dry place.



Do not disassemble this unit to avoid shorten its life.



Do not throw this unit to the ground from high.





Do not watch any program while driving to avoid the travel accident.



DVB Specification

Operating voltage	DC 12V
Operating current	1.2A
Video output impedance	75
Receiving frequency range	48.25-863.25MHz
Operating temperature	-10-60 °C
Audio system	Auto PAL/NTSC
Display mode	RGB/CVBS
Dimension	84mmX80.7mmX23.3mm



In the Configuration menu, enter Wakeup Timer and press UP/DOWN/LEFT/RIGHT to select the item and adjust the parameter.

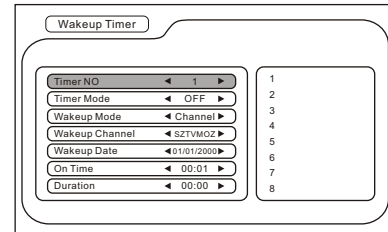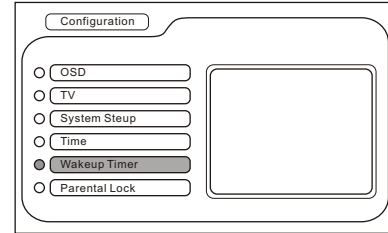


- 1.Timer No:
- 2.Timer Mode: select to turn off the unit Once / Daily / Weekly / Yearly
- 3.Wakeup Mode: set to turn on the unit(it functions when Timer Mode is notset as OFF)
4. Wakeup Channel: it functionswhen TimerMode is notset as OFF
- 5.Wakeup Date: it functionswhen TimerMode is notset as OFF
- 6.On Time: enter the exact time of turning on/off the unit(itfunctions when TimerMode is notset as OFF)
- 7.Duration: enter the duration directly(itfunctions when Timer Mode is notset as OFF)

Menu Setting


1. Timer Mode: to set the regular system for the TV
2. Date: to set the date of the system through the calendar interface (it functions when the Timer Mode is set as Manual)
3. Time: enter the time by number pad and press ENTER to confirm (it functions when the Timer Mode is set as Manual)
4. GMT Offset: it functions when the Timer Mode is set as Auto (it functions when the Timer Mode is set as Auto)
5. Summer Time: turn on/off the summer time mode (it functions when the Timer Mode is set as Auto)

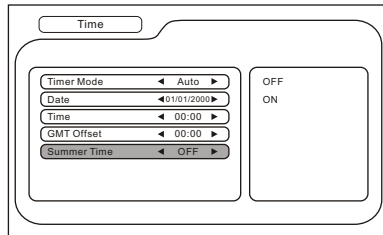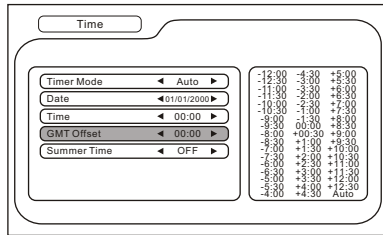


DVB-T Panel Description

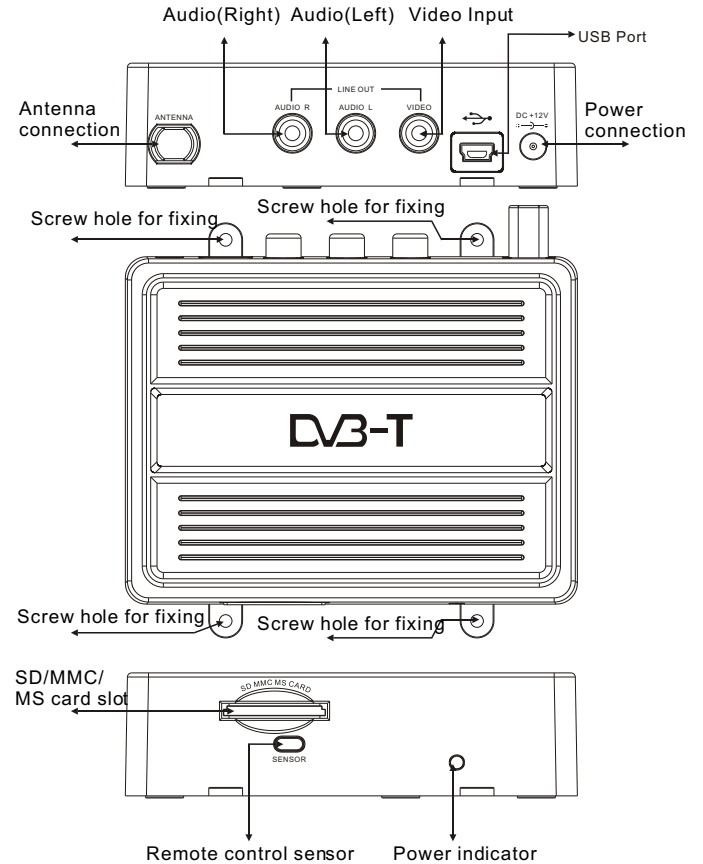



Remote Control

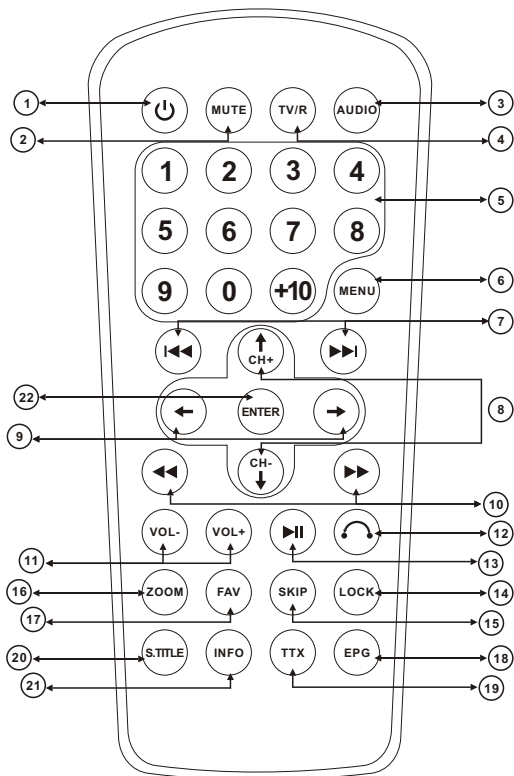 




Menu Setting

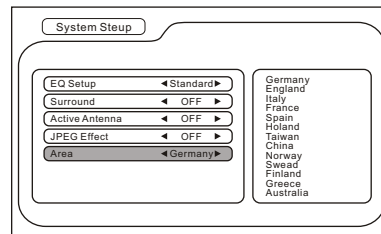


In the Configuration menu, enter Time and press UP/DOWN/LEFT/RIGHT to select the item and adjust the parameter.

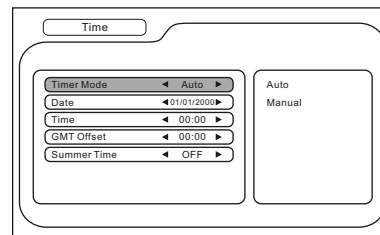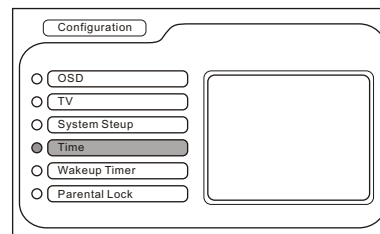

Menu Setting

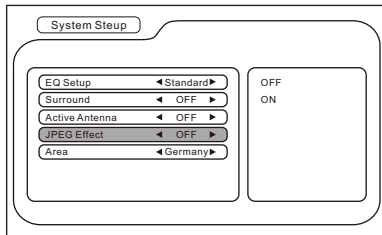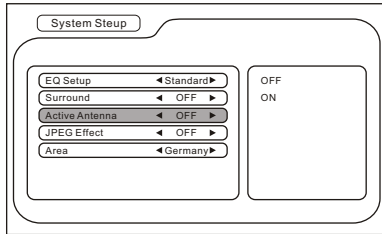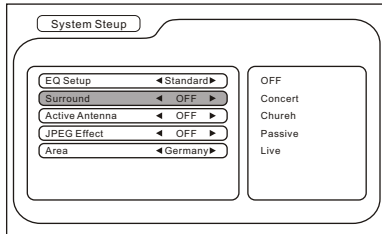


Usage of Remote control

1. **POWER**: After connecting the DVB-T, press this button to turn on/off the unit. (While the Power Indicator shines, it is turned on)
2. **MUTE**: To mute the sound
3. **AUDIO**: To change the Left or Right channel
4. **TV/R**: To change the TV mode
5. **Number pad**: To select the stations or set up the date or time.
6. **MENU**: To enter the main menu
7. **NEXT/PREVIOUS SONG**
8. **CH+/CH-**: To select the channel
9. **UP/DOWN/LEFT/RIGHT**: To move the pointer
10. **FAST FORWARD/BACKWARD**
11. **VOL+ /VOL-**: To increase/reduce the volume while audio playback.
12.  : Go back to the channel last time
13. **PLAY/PAUSE**: To play or pause the playback
14. **LOCK**: To set up the lock
15. **SKIP**: To enter the interface of searching station
16. **ZOOM**: In the JPEG playback, press this button to enlarge or reduce the size of the image according to 4:3/ 16:9
17. **FAV**: To set up the favorite channels
18. **EPG**: To display the detail list of the program
19. **TTX**:
20. **S.TITLE**: To set up the subtitle.
21. **INFO**: To display the information of the playing file
22. **ENTER**: To confirm the parameter


Menu Setting

Press the MENU button to enter the main menu. Then press UP/DOWN to select the item of Digital TV, Movie, Music, Photo and Games.

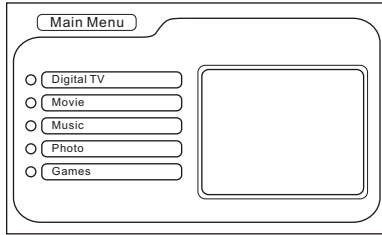



1. Digital TV: the menu of TV system setting
2. Movie: the menu of movie playback
3. Music: the menu of music playback
4. Photo: the menu of image playback
5. Games: the menu of game (including Boxman/Tetris/Hitrat)

In the main menu, select Digital TV and enter the interface of the TV system setting.



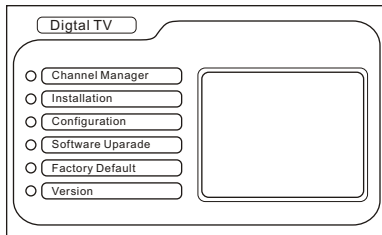


Menu Setting




In the Configuration menu, enter System Setup and press UP/DOWN/LEFT/RIGHT to select the item and adjust the parameter.

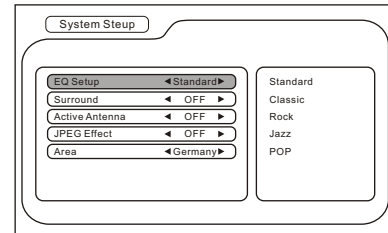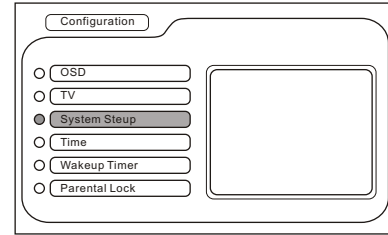




1. EQ Setup: to set the playback style of the system (including Standard / Classic / Rock / Jazz / Pop)
2. Surround: to set the playback background of the system (including Concert / Church / Passive / Live)
3. Active Antenna: to active the function of the antenna.
4. JPEG Effect: turn on to display the JPEG file
5. Area: User could choose the most suitable TV frequency from 13 different countries in the menu: Germany, England, Italy, France, Spain, Holland, Taiwan, China, Norway, Sweden, Greece, Australia

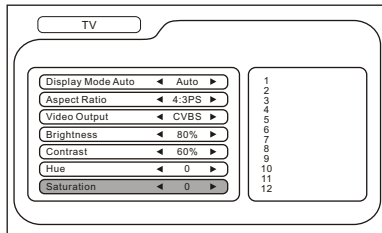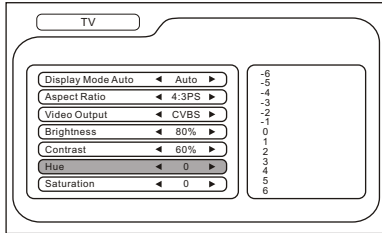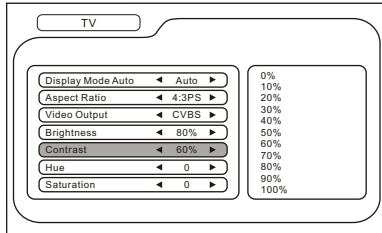




1. Channel Manager: to search the frequency of channel for TV stations.
2. Installation: input the password "0000" to enter the interface of searching channel directly.
3. Configuration: to enter the menu of the system setting
4. Software Upgrade: upgrade the software
5. Factory Default: to restore the default setting
6. Version

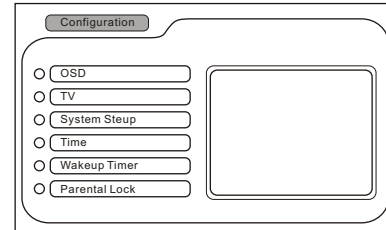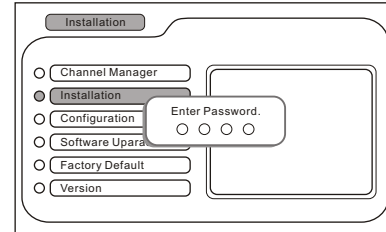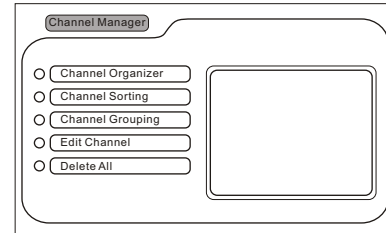

Menu Setting

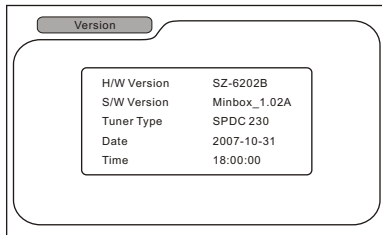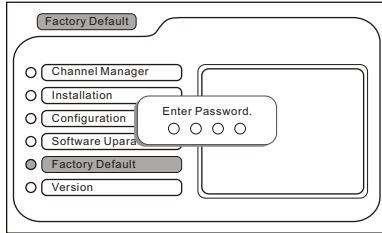
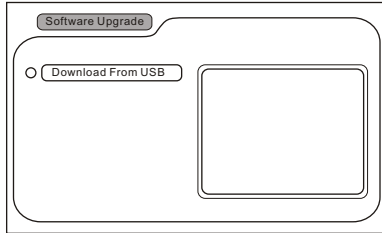


Menu Setting

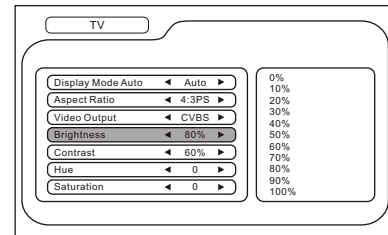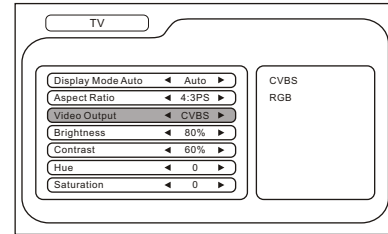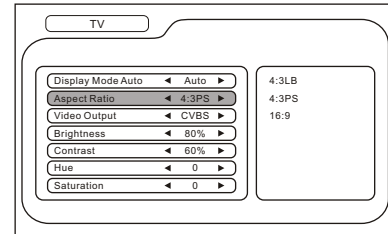 

Menu Setting


In the Configuration menu, select TV and press UP/DOWN to select the item, press LEFT/RIGHT to adjust the parameter.

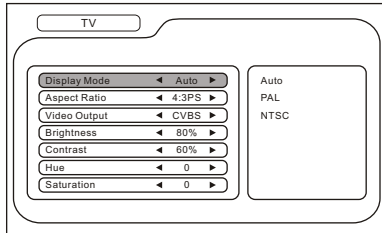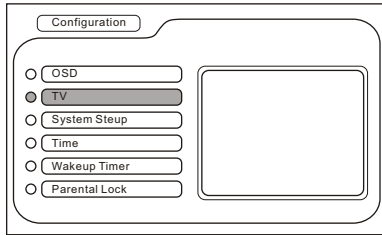

1. Display Mode: to set the TV system(including Auto/PAL/NTSC)
2. Aspect Ratio: to set the aspect ratio of playback(including 4:3LB / 4:3PS/ 16:9)
3. Video Output: to set the mode of video output(including CVBS/ RGB chromatic mode)
4. Brightness: to set the brightness of the display
5. Contrast: to set the contrast of the display
6. Hue: to set the hue(the exchange of dark and hue) of the display
7. Saturation: to set the saturation (of the color) of the display.


Menu Setting

Press the MENU button on the remote control to enter the main menu, and then select Digital TV -> Configuration

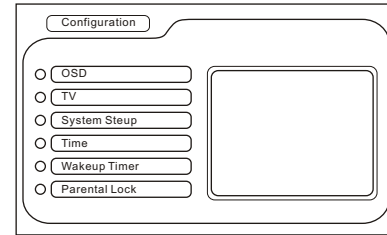


- 1.OSD: to set the theme and the status of the OSD
- 2.TV: to set the status of the TV playback
- 3.System Setup: to set the status of the audio and video playback
- 4.Time: to set the timer of the TV
5. Wakeup Timer:
- 6.Parental Lock: to set the parental lock with password

In the Configuration menu, select OSD and press UP/DOWN to select the item, press LEFT/RIGHT to adjust the parameter.

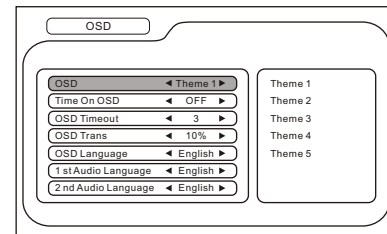

Menu Setting

- 1.OSD: to set the background color of the interface(Blue, Red, Grey, Green, Rosiness)
- 2.Time On OSD: to show the time on OSD
- 3.OSD Timeout: to set the timeout of the system playback
- 4.OSD Trans: to set the size of the subtitle
- 5.1st Audio Language: to set the language of audio
- 6.2nd Audio Language: to set the language of audio

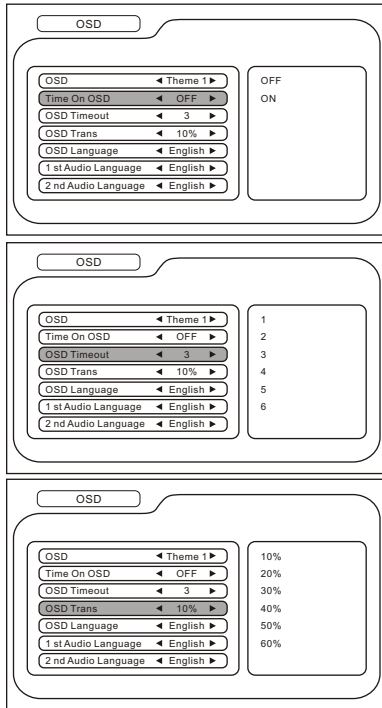

Menu Setting

