 


XTRONS

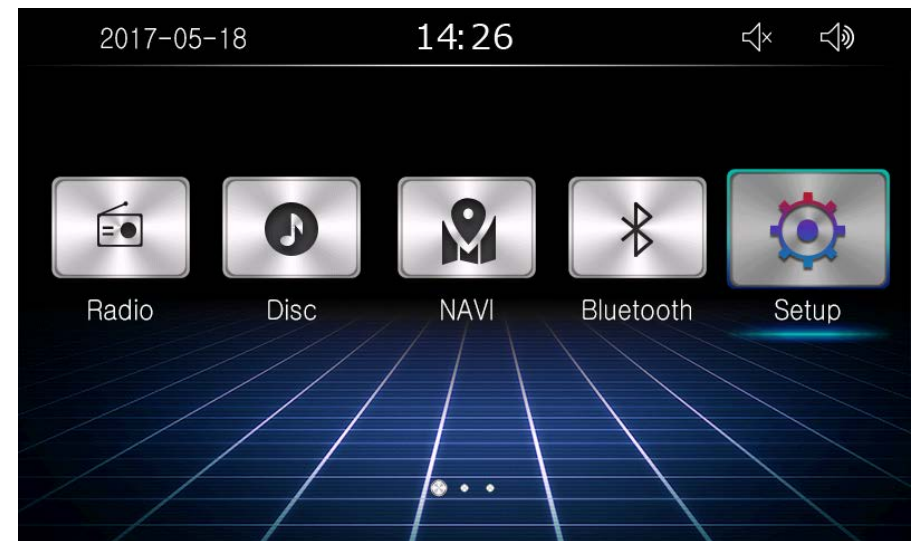

USER MANUAL

Thank you for buying this XTRONS product. Please read through these instructions so you will know how to operate this unit properly. After you have finished reading the instructions, keep this document in a safe place for future reference.

Contents

- Precaution 2
- Main Menu 5
- Radio 7
- Play DVD 8
- USB/SD 9
- AUX Input 10
- Bluetooth 11
- Screen Mirroring 14
- Settings 14
- Troubleshooting 19

Precaution

Before installing this product

- Use this unit with a 12-volt battery and negative grounding only. Failure to do so may result in a fire or malfunction.
- To avoid shorts in the electrical system, be sure to disconnect the (-) battery cable before installation.

Important safety information

 **WARNING**

- Do not attempt to install or service this product by yourself. Installation or servicing of this product by persons without training and experience in electronic equipment and automotive accessories may be dangerous and could expose you to the risk of electric shock, injury or other hazards.
- Do not allow this product to come into contact with liquids. Electrical shock could result. Also, damage to the product , smoke and overheating could result from contact with liquids.
- If liquid or foreign matter should get inside this product, park your vehicle in a safe place, turn the ignition switch off (ACC OFF) immediately and consult your dealer. Do not use this product in this condition because doing so may result in a fire, electric shock, or other failure.
- If you notice smoke, a strange noise or odor from this product, or any other abnormal signs on the screen, turn off the power immediately and consult your dealer. Using this product in this condition may result in permanent damage to the system.

- Do not disassemble or modify this product, as there are high-voltage components inside which may cause an electric shock. Be sure to consult your dealer for internal inspection, adjustments or repairs.

Before using this product , be sure to read and fully understand the following safety information:

- Do not operate this product, any applications, or the rear view camera option (if purchased) if doing so will divert your attention in any way from the safe operation of your vehicle. Always observe safe driving rules and follow all existing traffic regulations. If you experience difficulty in operating this product or reading the display, park your vehicle in a safe location and apply the parking brake before making the necessary adjustments.
- Never set the volume of this product so high that you cannot hear outside traffic and emergency vehicles.
- To promote safety, certain functions are disabled unless the vehicle is stopped and/or the parking brake is applied.
- Keep this manual handy as a reference for operating procedures and safety information.
- Do not install this product where it may (i) obstruct the driver's vision, (ii) impair the performance of any of the vehicle's operating systems or safety features, including air bags or hazard lamp buttons or (iii) impair the driver's ability to safely operate the vehicle.
- Please remember to fasten your seat belt at all times while operating your vehicle. If you are ever in an accident, your injuries can be considerably more severe if your seat belt is not properly buckled.
- Never use headphones while driving.

To ensure safe driving

 **WARNING**

- **LIGHT GREEN LEAD AT POWER CONNECTOR IS DESIGNED TO DETECT PARKED STATUS AND MUST BE CONNECTED TO THE POWER SUPPLY SIDE OF THE PARKING BRAKE SWITCH. IMPROPER CONNECTION OR USE OF THIS LEAD MAY VIOLATE APPLICABLE LAW AND MAY RESULT IN SERIOUS INJURY OR DAMAGE.**
- **Do not take any steps to tamper with or disable the parking brake interlock system which is in place for your protection. Tampering with or disabling the parking brake interlock system could result in serious injury or death.**
- **To avoid the risk of damage and injury and the potential violation of applicable laws, this product is not for use with a video image that is visible to the driver.**
- In some countries the viewing of video images on a display inside a vehicle even by persons other than the driver may be illegal. Where such regulations apply, they be obeyed.
If you attempt to watch video images while driving, the warning **“Viewing of front seat video source while driving is strictly prohibited.”** will appear on the screen. To watch video image on this display, stop the vehicle in a safe place and apply the parking brake. Please keep the brake pedal pushed down before releasing the parking brake.

 
 
 
To avoid battery exhaustion

Be sure to run the vehicle engine while using this product. Using this product without running the engine can drain the battery.

 **WARNING**


Do not install this product in a vehicle that does not have an ACC wire or circuitry available.

Main Menu

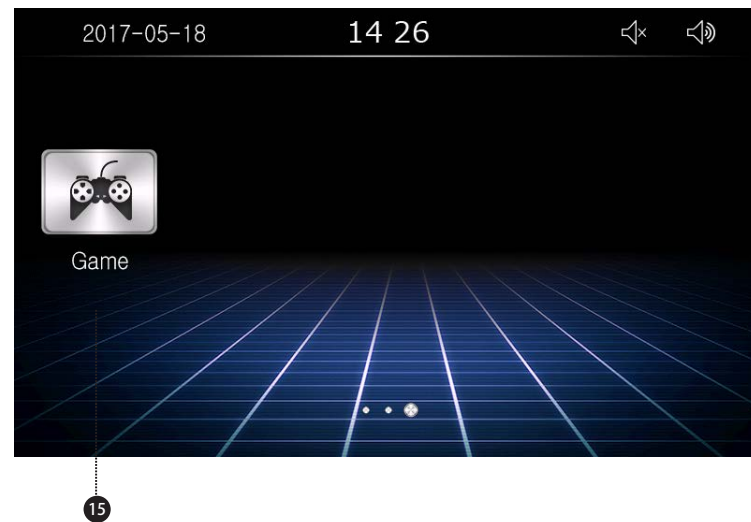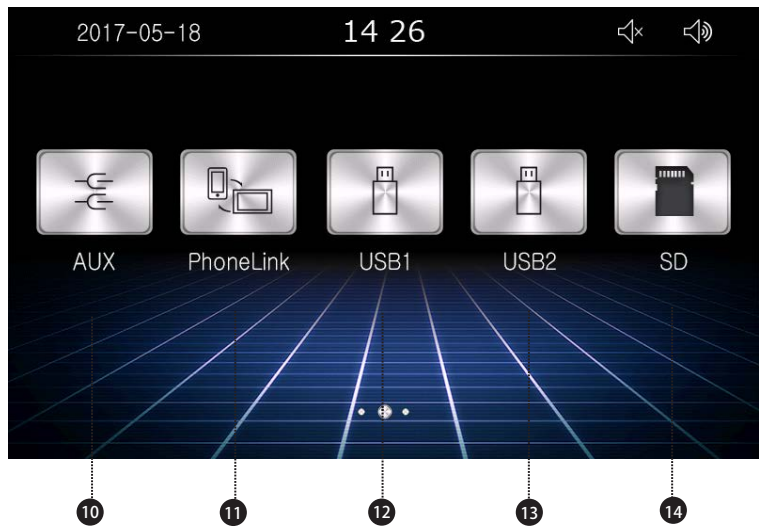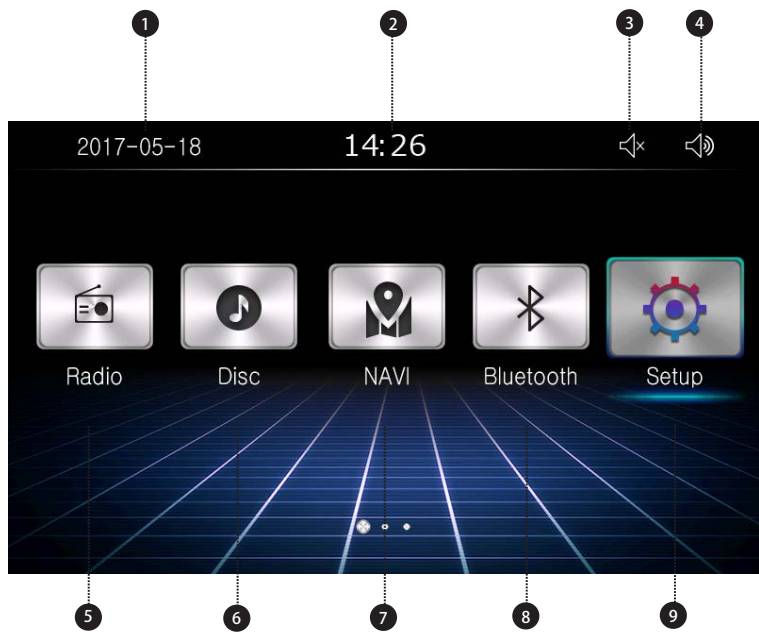

- 1. Date
- 2. Time
- 3. Mute
- 4. Volume
- 5. Radio
- 6. Disc
- 7. Navigation
- 8. Bluetooth
- 9. Settings
- 10. AUX Input
- 11. Screen Mirroring
- 12. USB1
- 13. USB2
- 14. SD
- 15. Game

 Radio

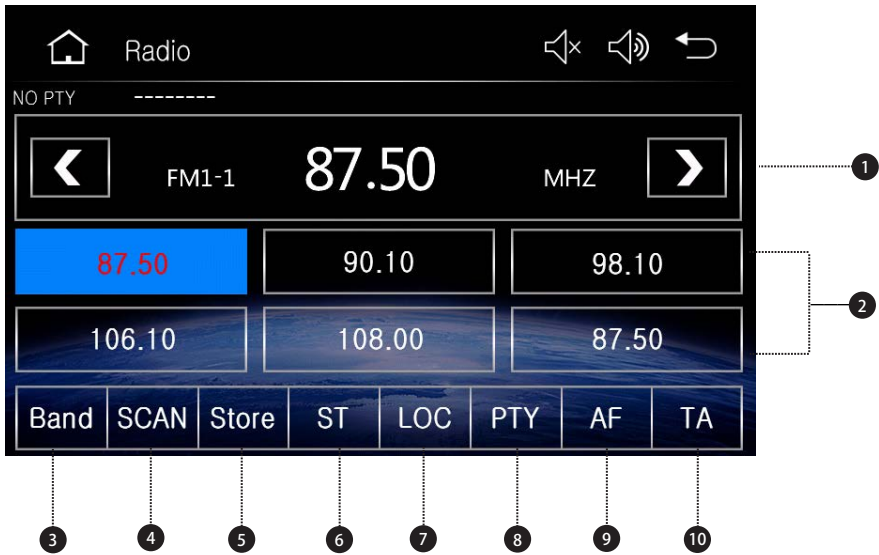

1. Perform manual tuning
 2. Preset channel list
 3. Band (FM1, FM2, FM3, AM1 or AM2)
 4. Perform seek tuning or non-stop seek tuning
 5. Store the current broadcast frequency
- Up to 18 FM stations and 12 AM stations can be stored in memory.
6. Mono/Stereo switch
 7. Distant/Local seek tuning
 8. PTY (Program Type)
 9. AF (Alternative Frequencies)
 10. TA (Traffic Announcement)

Play DVD

 
DVD Player

CAUTION

1. There are two screws on the top face of the unit to protect the disc drive in transit. The screws need to be removed first. Otherwise it cannot accept or play discs.



2. For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, stop in a safe place and apply the parking brake.

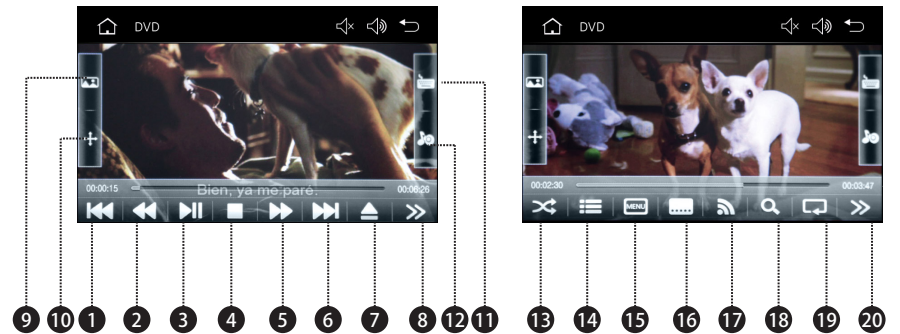


1. Previous file
 2. Rewind
- Up to 8 times faster.
3. Pause/Play
 4. Stop
 5. Fast forward
- Up to 8 times faster.

- 6. Next file
- 7. Eject a disc
- 8. Next page
- 9. Display adjustment
Adjust the brightness , contrast, and color of the screen.
- 10. Viewing angle adjustment (not available)
- 11. Select files
- 12. Equalizer adjustment
Choose from Standard, Pop, Cinema, and Rock.
- 13. Play files in random order
- 14. Title
- 15. Menu
- 16. Language
- 17. Audio channel settings
Choose from Mono L, Mono R, and Stereo.
- 18. Zoom
Choose from 1/4,1/3,1/2, 2, 3, 4, 5, and off.
- 19. Repeat play
Choose from repeat the current file, repeat the list, and repeat all files.
- 20. Previous page

USB/SD

 Plug a USB storage device or insert an SD memory card, and then tap USB or SD on the main menu to enter USB or SD mode.

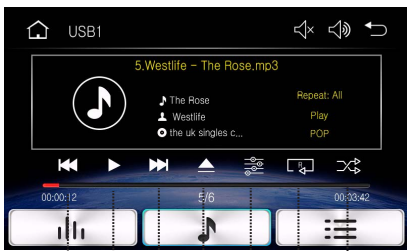

- 1
- 2
- 3
- 4
- 5
- 6
- 7

(USB1 Mode)



- 1
- 2
- 3
- 4
- 5
- 6
- 7

(USB2 Mode)

USB1 Mode

- 1. Previous file
- 2. Pause/Play
- 3. Next file
- 4. Eject (not available)
- 5. Equalizer adjustment
Choose from Standard, Pop, Soft, Cinema, Heavy metal, Rock, Classic, Jazz, etc.
- 6. Repeat play
Choose from repeat the current file, repeat the current folder, repeat all files and off.
- 7. Random play on/off

USB2 Mode

- 1. File menu
- 2. Previous file
- 3. Pause/Play
- 4. Next file
- 5. Equalizer adjustment
Choose from Standard, Pop, Soft, Cinema, Heavy metal, Rock, Classic, Jazz, etc.
- 6. Album list
- 7. Repeat play
Choose from repeat the current file, repeat the current folder, repeat all files and off.

 
AUX Input

You can display the video images output by the device connected to this unit.



For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, stop in a safe place and apply the parking brake.

Bluetooth

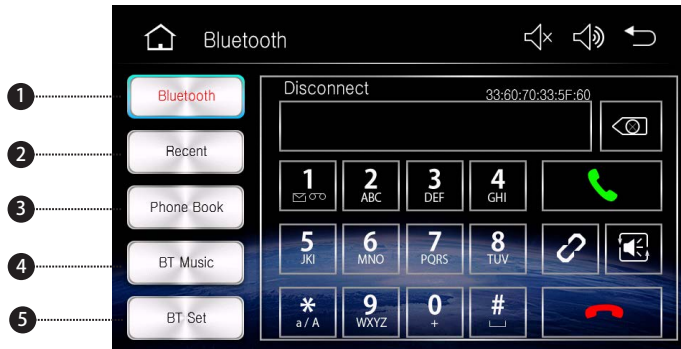

- 1. Bluetooth
- 2. Recent calls
- 3. Phone book
- 4. Bluetooth music
- 5. Bluetooth settings

Connect your mobile phone to this unit via Bluetooth and use an external microphone to make and receive hands-free calls.

! CAUTION


For your safety, avoid talking on the phone as much as possible while driving.

*** Connect to a Bluetooth device**

 Connection (Bluetooth pairing)


- a. The Bluetooth device must be within 1 meter of this unit. Turn on Bluetooth on the device.
- b. You can find this unit in the devices list of your Bluetooth device.
- c. If your Bluetooth device supports SSP (Secure Simple Pairing), a four-digit number password will be required. The default password is 0000.

1. Phone calls

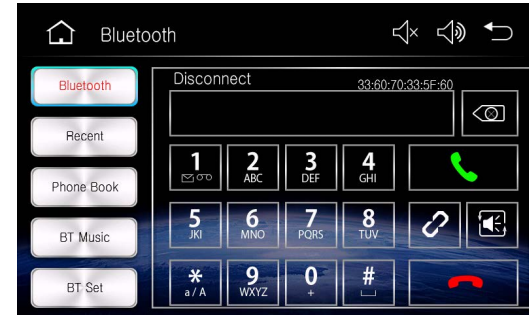


Enter the number to make a call. You can also choose a contact from the phone book to make a call.

 2. Recent calls

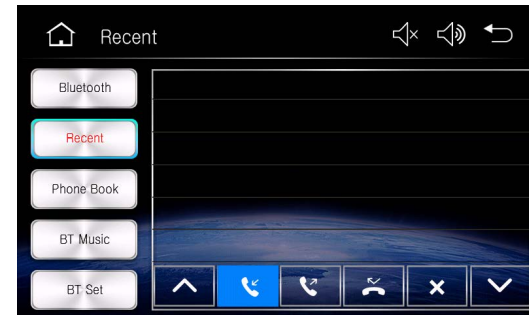

View recent outgoing calls, incoming calls or missed calls.

 
3. Phone book

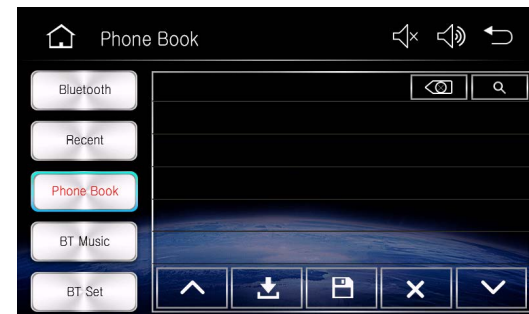

Tap  to synchronize the contacts from your Bluetooth device.

- ※ Please note that the unit may not support the phone book function when some mobile phones are not quite compatible with the unit.

 
4. Bluetooth music

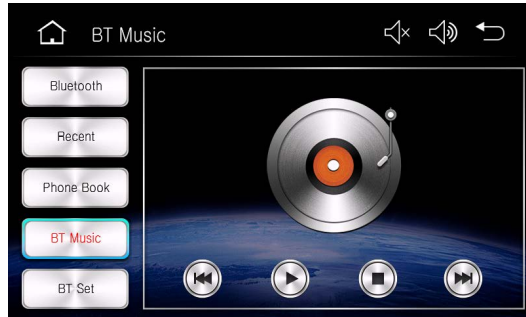

After the Bluetooth connection is established, you can play music stored in your Bluetooth device on this unit.

- ※ At first, you need to operate the music playback on your Bluetooth device. Then you can operate the Bluetooth music on the unit.
- ※ Please note that the unit may not support the Bluetooth music function when some mobile phones are not quite compatible with the unit.

 5. Bluetooth settings

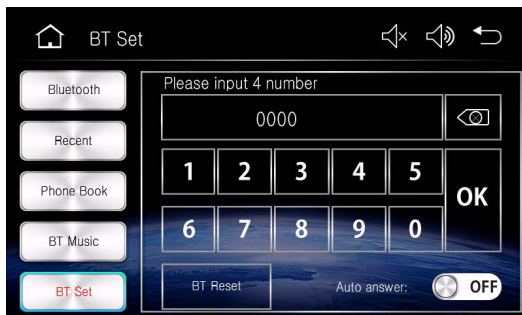

- ① You can revise the Bluetooth pairing password. The default password is 0000. Enter another four-digit number, and then tap OK to set a new password.
- ② You can turn *answer an incoming call automatically* on or off.
- ③ BT Rest
If Bluetooth pairing cannot work, please try the BT Reset.

Screen Mirroring

Tap PhoneLink on the menu screen to enter screen mirroring mode. When you connect a mobile phone with compatible applications installed, you can control the applications for the mobile phone directly from this unit.

- ※ Please note that the screen mirroring function works for Android smart phones only.

Settings

1. General settings



1.1 Any Key Power

On: You can turn on the unit by pressing any button on the panel next time.
Off: You can turn on the unit by pressing the power button only.

1.2 Brake Set

On: Video images cannot be viewed while your vehicle is in motion.
Off: Video images can be viewed while your vehicle is in motion.

! CAUTION

For safety reasons, video images cannot be viewed while your vehicle is in motion. To view video images, stop in a safe place and apply the parking brake.

 
1.3 Beep

1.4 Auto Enter GPS

On: The navigation works automatically after the unit is powered on.

1.5 OSD Time ON

On: The time appears on the upper right side in DVD mode.

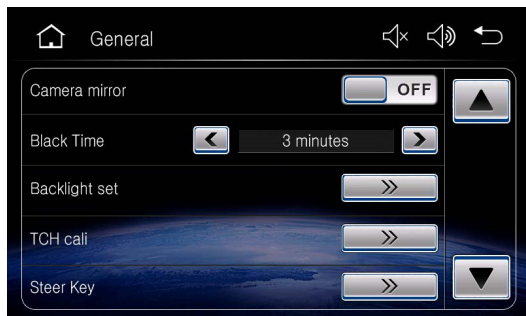

1.6 Camera Mirror

A separately sold rear view camera is required for utilizing the rear view camera function.

On: Reverses the rear view camera images.

Off: Does not reverse the rear view camera images.

1.7 Black Time (Screen Timeout Settings)

Choose from 3 minutes, 5 minutes, 10 minutes, and cancel.

1.8 Backlight Set

 
Drag the slider to adjust the Day Backlight and the Night Backlight.

1.9 TCH Cali (Touch Calibration)

Tap the center of “+” on the screen, and move along with the center of “+” so as to calibrate the screen. Tap OK to save the data and exit.

1.10 Steer Key

This allows you to use the steering wheel control of your vehicle to control the unit.

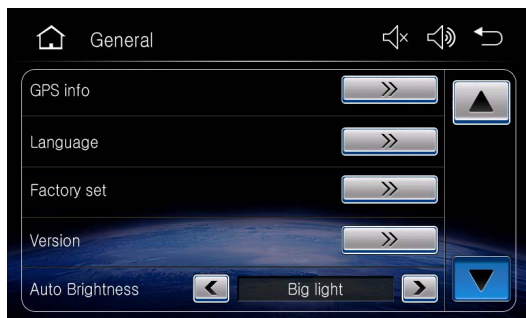

1.11 GPS Info

This displays GPS receiver information. You can set the time zone.

1.12 Language

Set the language for the unit. Choose from English, French, German, Spanish, and more.

1.13 Factory Set

Enter the password 3368 to go to Factory Settings.

Logo set: Select one of the preinstalled car manufacturer logos as your start up screen. You can also select images imported from an SD memory card. You need to insert the SD memory card into the GPS card slot. The image size should be 800 pixels x 480 pixels and the image format should be JPEG.

1.14 Version

See information about the unit.

1.15 Auto Brightness

Big Light: Connect the illumination wire to the positive pole of your vehicle headlights. This makes the dimmer function work. The unit will dim the display automatically when the headlights are on.

 


1.16 GPS Mix

1.17 Key Light Color

2. Audio settings


2.1 Fader/Balance Adjustment

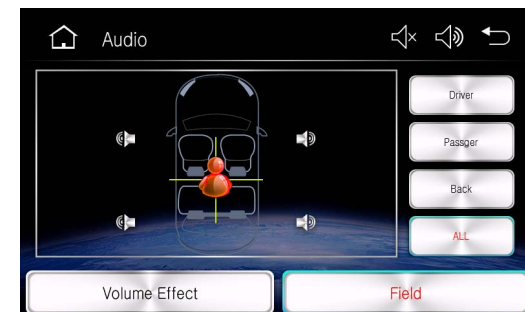

You can select a listening position that you want to make as the center of the sound effects.


Choose from Driver, Passenger, Back, and All.

 2.2 Equalizer Adjustment

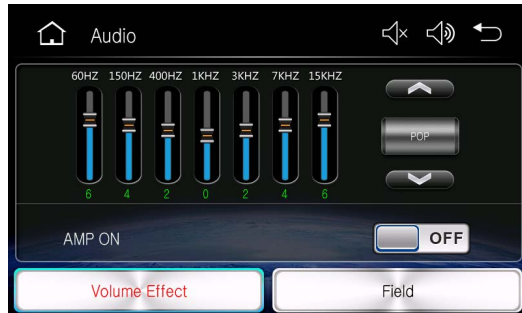


You can choose from Standard, Pop, Soft, Cinema, Heavy metal, Rock, Classic, Jazz, etc.

 3. Time settings

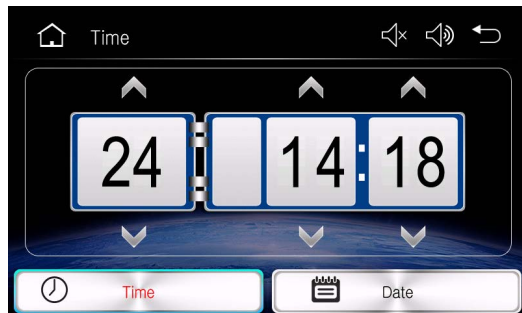

Set the date and time manually.
Set whether the unit shows 24-hour time or 12-hour time.

 4. GPS settings

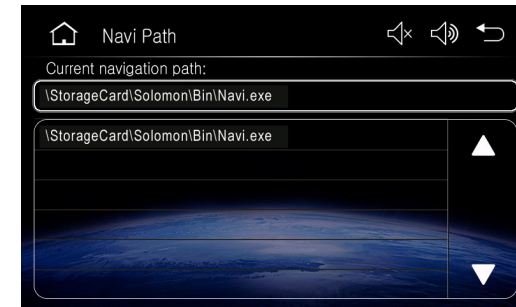

- Insert the SD card with maps into the GPS card slot.
- Go to Setup > Navi Path to choose the navigation path.
- Tap the Navigation icon to start the GPS operation.

✘ **The wrong navigation path will lead to a frozen screen. If this happens, please reset the unit.**

Troubleshooting

If you have problems operating this product, refer to this section. The most common problems are listed below, along with likely causes and solutions.

No power

- Car engine has not been started. Start the car engine.
- Incorrect wiring connection. Check the wiring.
- Fuse has been damaged. Replace fuse.

No sound

- Volume is too low. Adjust volume.
- Incorrect wiring connection. Check the wiring.

No image

- Parking brake wire connect is incorrect. Check the parking wiring.

Disc does not play

- The disc is inserted upside down. Insert the disc with the label upward.
- The disc is dirty. Clean the disc.
- The disc is cracked or otherwise damaged. Insert a normal, round disc.
- The files on the discs are in an irregular file format. Check the file format.
- The disc format cannot be played back. Replace the disc.
- The loaded disc is a type this product cannot play. Check what type of disc it is.

The screen is covered by a caution message and the video cannot be shown

- The parking brake lead is not connected or applied. Connect the parking brake lead correctly, and apply the parking brake.
- The parking brake interlock is activated. Park your vehicle in a safe place and apply the parking brake.

Image flashes or distorted

- Video DVD settings do not match with the DVD. Adjust video DVD settings.
- Video connection is incorrect.

Noise in broadcasts

- Signals are too weak. Select other stations with stronger signals.
- Check the connection of the vehicle antenna.
- Change broadcast from stereo to mono.

Preset station lost

- Battery cable is not correctly connected. Connect the battery cable to the terminal that is always live.

The paired mobile phone connects and disconnects constantly

- The Bluetooth reception is poor. Move the mobile phone closer to the product or remove any obstacle between the mobile phone and the product.
- Some mobile phones may connect and disconnect constantly when you make or end calls. This does not indicate any malfunction of the product.
- For some mobile phones, the Bluetooth connection may be deactivated automatically as a power-saving feature. This does not indicate any malfunction of the product.

For more information, please visit our websites



xtrons.com



xtrons.co.uk

For installation and technical advice please visit



www.forum.xtrons.co.uk



Twitter:



https://twitter.com/xtrons_ug



Facebook:



<https://www.facebook.com/Xtrons/>



YouTube:



<https://www.youtube.com/user/ourxtrons/>



Google+:



<https://plus.google.com/+xtrons/>



RSS:



<http://xtrons.com/rss/>

